

# Burmester

111 MUSICCENTER



## Short Operating Guide

## ABOUT THIS GUIDE

This short operating guide will show you how to start using your 111 Musiccenter in just a few quick and easy steps. It does not replace the full operating instructions for the device itself and for the iPad. You will find a description of all the functions (such as operation over a network) and detailed information on operation using an iPad in the full instructions.

- ▶ In particular, before you connect up and start using your 111 Musiccenter, please also read the safety instructions in the full operating instructions.

## UNPACKING AND SETTING UP

1. Put the box on the floor and take out all the accessories and the device.

**CAUTION!**


**The device is very heavy and may cause injury if dropped.**

- ▶ If necessary get another person to help you.
2. Place the device on a stable, level surface.
  3. Keep the device away from heat and moisture.
  4. Connect the device as described below.

## CONNECTING UP


Only a few of the connections are described here. You can find a detailed description of all the possible connections in the full operating instructions for the device.

## Connecting analog signal sources

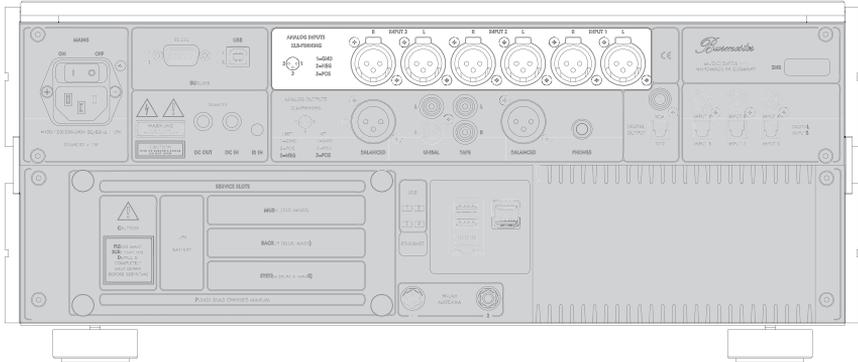


- ▶ Connect analog signal sources to **INPUT 1/2/3** using balanced LF cables. Unbalanced cables can be connected using the XLR-RCA adapters supplied with the device.

## Connecting digital signal sources

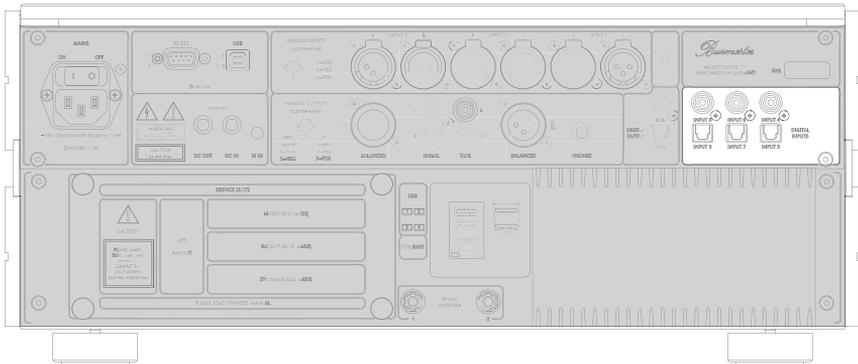


- ▶ Connect electrical digital signal sources such as a CD player to **INPUT 4/6/8**.
- ▶ Connect optical digital signal sources such as a DAB tuner to **INPUT 5/7/9**.

## Connecting a power amplifier

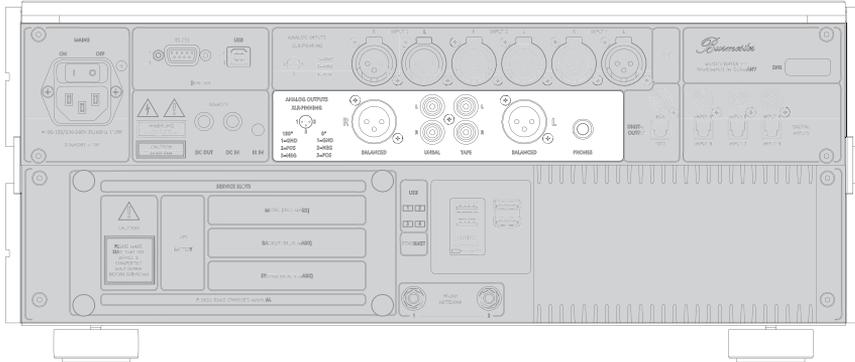

- ▶ For the best sound, connect the inputs of your power amplifier to the **BALANCED** sockets using a balanced LF cable.
- ▶ Use the **UNBAL** outputs and a Cinch cable if your power amplifier only has unbalanced Cinch inputs.


## Connecting the power cord

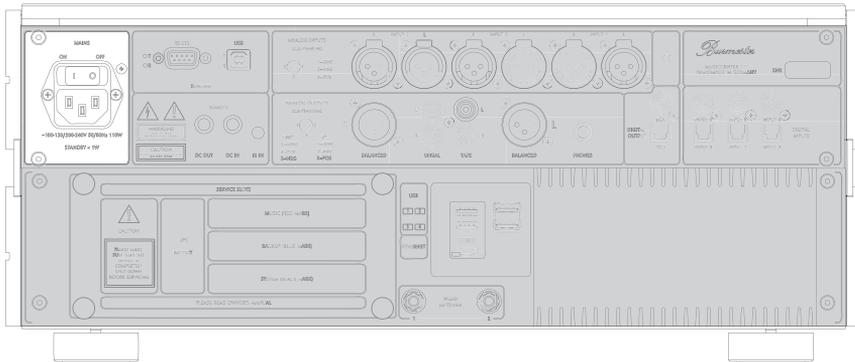

1. Plug the power cord into the socket shown here and connect the other end to the AC power outlet.
2. Switch the **MAINS** switch to **ON**.

# SWITCHING ON

1. Set the **POWER** switch on the front panel to the center setting.
  - ↪ The LED glows orange and the device is in Standby mode.
2. Briefly press the **POWER** switch up or press the **POWER** button on the remote control.
  - ↪ The LED glows red and the system boots up. This process can take some time.

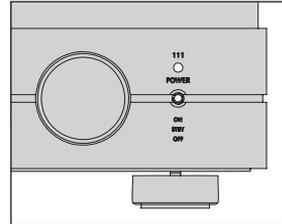

As soon as the system has booted up, the **Setup Wizard** starts and takes you through the initial settings.

3. Press the **Start** button.



You can now select whether to use the device without a network connection (Stand alone) or with a network connection (Standard).

4. To use the device without a network connection: Press the **Stand alone** button and then press the **Next** button.



You can find detailed instructions on how to use the device in a network in the full instructions for the device and the iPad.

## To switch the device to Standby mode:

- ▶ Briefly press the **POWER** switch up or press the **POWER** button on the remote control.
  - ↪ After the system powers down the device switches to Standby mode.

## To completely switch off the device:

- ▶ Press the **POWER** switch down into the **Off** position.
  - ↪ After the system powers down the device switches off. You will not be able to use the remote control to switch it on again from this state.

## PLAYING A CD

You do not need to select CD Player mode first to play a CD.

1. Slide a CD into the CD slot directly below the display.

↳ The CD is pulled in automatically as soon as you have pushed it in to the point where you can feel resistance.



↳ The CD is loaded and playback begins immediately. The screen displays information about the track that is being played.



2. Use the row of buttons on the left of the screen or the corresponding buttons on the remote control to operate the CD Player.



**PAUSE** (only displayed when the CD is playing)  
Pauses the replay at the current point.



**PLAY** (only displayed if STOP or PAUSE has been pressed)  
Starts playback.



**FORWARD**  
Playback jumps to the next track.



**BACK**  
Playback jumps back to the previous track.



**STOP** (only displayed when the CD is playing)  
Stops replaying the CD and resets to track 1.



**EJECT** (only displayed when playback is stopped)  
Ejects the CD from the slot.

# REPLAYING SIGNAL SOURCES

1. If you are still in the CD Player or another menu: Press the **Home** button at the bottom right edge of the screen.




- ↳ This button returns you to the Main menu from any other menu.



2. Use the left-hand rotary control to select **Analog Inputs** or **Digital Inputs** and press the rotary control to open the selection menu.




3. Use the left-hand rotary control to select the desired input and press the rotary control.

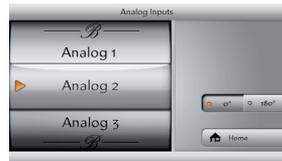

The input is now selected. You can also change the phase using the button on the right-hand edge of the screen.

4. Select the best sound setting by repeatedly pressing the button.

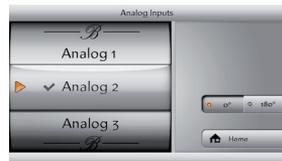

When you select a digital source, you can also select the sampling rate.





**BURMESTER HOME AUDIO GMBH**  
Wilhelm-Kabus-Straße 47  
D-10829 Berlin

Tel. +49 (0) 30 787968 - 0  
Fax +49 (0) 30 787968 - 68  
E-Mail: [mail@burmester.de](mailto:mail@burmester.de)  
[www.burmester.de](http://www.burmester.de)

Version 1.0