

Burmester

SHORT OPERATING GUIDE

150 NETWORK PLAYER



TOP LINE

Dear Music Enthusiast,

Congratulations on your selection and thank you for your trust.

You have chosen a product that combines absolute fidelity and uncompromising quality with technical innovation and maximum flexibility.

Please read through these operating instructions at least once before initially installing the product so you can fully benefit from all the functions of this truly high-fidelity device. Should any of your questions remain unanswered, please contact your specialist dealer or us directly.

Talk to us about any special requests you may have - even if they seem exceptional. We love accepting technically feasible challenges.

We wish you many hours of high-fidelity listening.

The Burmester Team

iPad® is a registered trademark of Apple® Inc., registered in the U.S.A. and other countries.
HIGHRESAUDIO is a registered trademark.

Using third-party services (Internet radio, music streaming services) with the 150 Network Player is subject to any terms of use of those suppliers, as well as technical requirements for the user such as Internet access and service availability over which Burmester Home Audio GmbH has no control.

Software-Version 3.20

TABLE OF CONTENT

INTRODUCTION 5

A WORD OF CAUTION..... 5

IMPORTANT SAFETY INFORMATION..... 6

Opening the device6

Replacing defective fuses6

Power supply6

Placing the Network Player6

Operation during thunderstorms.....6

UNPACKING THE NETWORK PLAYER 7

What’s in the box?.....7

INSTALLING THE NETWORK PLAYER 7

Connecting the Wi-Fi antennas.....7

Connecting the Network Player to a power amplifier.....8

Connecting a network cable8

Connecting the power cord8

CONTROL ELEMENTS AND DISPLAYS 9

HOW TO SWITCH THE PLAYER ON? 10

HOW TO CONNECT THE NETWORK PLAYER TO A NETWORK? 10

Establishing a network connection with an Ethernet cable11

Establishing a network connection using Wi-Fi11

HOW TO CONNECT COMPUTER AND NETWORK PLAYER? 12

Connections using a network connection via Ethernet cable12

Connections using a Wi-Fi network connection.....13

Establishing a LAN connection between Router and computer.....13

Establishing a Wi-Fi connection between Network Player and Tablet/PC/Mac13

HOW TO PLAY CONTENT FROM THE NETWORK?	14
HOW TO PLAY CONTENT FROM A USB STORAGE DEVICE?	14
HOW TO PLAY CONTENT FROM THE INTERNET?	15
Streaming music online using TIDAL	15
Input/Output Connectors	15
General Specifications	15

INTRODUCTION

The Network Player 150 was designed and manufactured with the highest possible audio performance in mind. This performance is greatly influenced by the correct installation and operation of this fine audiophile instrument. We, therefore, urge you to read this manual very carefully and keep it handy for future reference.

This manual is intended to give you all the information you need to operate the Network Player (Software Version 3.20) safely and to its full potential.

To use all the functions of the 150 Network Player you will need either an Apple iPad® with the free BurmesterMC App installed or any computer (PC, Tablet, Mac) with a Web browser (iPad® or computer are not included). How to use the App or a Web browser to control the Network Player will be explained in a separate manual.

A WORD OF CAUTION

Please keep in mind that the Network Player 150, like any other electrical device, must be handled with care and caution at all times. Especially digital components operate with very high and potentially lethal voltages. Careless or negligent operation may not only damage the device and other components in the system but may also cause bodily harm and even death.

IMPORTANT SAFETY INFORMATION

Opening the device

Do not open the device. The device does not contain any parts that can be maintained by the user. Fuses inside the device may only be replaced by authorized staff, such as your specialist dealer.

Replacing defective fuses

A defect fuse may render the device inoperative, meaning the device does not turn on even though a power supply is present. When the power plug is connected and the mains switch is on, a lethal voltage is present after opening the fuse holder inside the fuse compartment. The fuses (F1, F2) are located inside the device and may only be replaced by a qualified professional.

Power supply

Use the supplied 3-lead power cord for the AC connection. The protective ground lead must not be eliminated. Furthermore, the device may only be connected to a grounded AC outlet.

The Network Player has a power supply unit that automatically adjusts to the available power supply. As a result, the device can be operated with all common household currents. String the power cord in a way that prevents it from being damaged. If a power cord does get damaged we recommend switching the device off and contacting your audio dealer.

Disconnecting the device from the power supply

To disconnect the Network Player from the power supply completely, use the easy-to-access mains switch on the rear panel.

Placing the Network Player

When selecting an installation location, please observe the following:

- Avoid direct sunlight, excessive heat, cold, moisture, and dust.
- Ensure sufficient ventilation. Do not place the device in a closed rack.
- Do not cover the slots and openings on the device. They serve as a means of ventilation.
- Do not expose the device to dripping water or spray water and do not place any containers holding liquids on your device. Do not place any open ignition sources, such as burning candles, on the device.

Operation during thunderstorms

During thunder and lightning storms, disconnect the device from the power supply by unplugging the power cord from the unit or from the power socket. Switching off the mains switch on the rear panel of the device is not sufficient. For good measure, also disconnect all other components from the power supply.

UNPACKING THE NETWORK PLAYER

1. Place the box on the floor and carefully remove the 150 and its accessories.
2. Place the device on a stable, level surface.
3. Protect the device from heat and humidity.
4. Connect the 150 as described in the following chapter.

What's in the box?

The following items are supplied:

- Network Player 150
- 2 screw-on antennas for Wi-Fi reception
- Power cord
- Remote control
- These operating instructions: Quick Start Guide; Owner's Manual for the 150, Instructions for Operation via the iPad® App; Instructions for Operation via a Web browser

INSTALLING THE NETWORK PLAYER

Connecting the Wi-Fi antennas


The Wi-Fi antennas are required to connect a computer (iPad®, tablet, Mac, PC) or a router to the Network Player via Wi-Fi.

CAUTION

Damage due to missing or incorrect connection


Not connecting the antennas could damage the Wi-Fi unit. Tightening the antennas too tightly could damage the connections.

- Always mount both antennas, even if you don't use Wi-Fi
- Only tighten the screw base finger-tight. Do not use a tool.

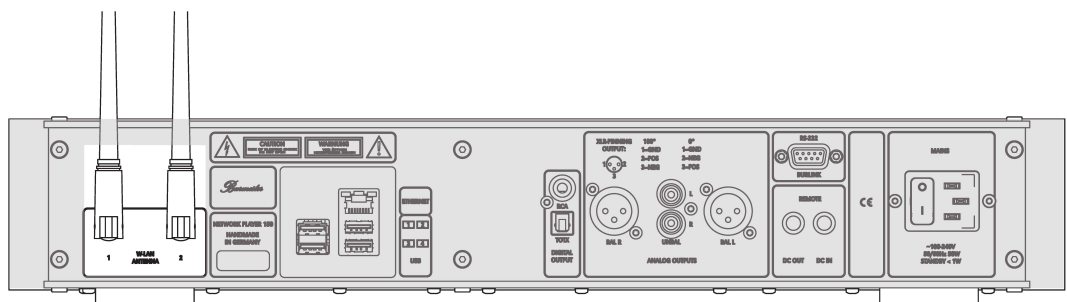

- Mount the two supplied antennas on the antenna sockets on the rear panel.

Connecting the Network Player to a power amplifier

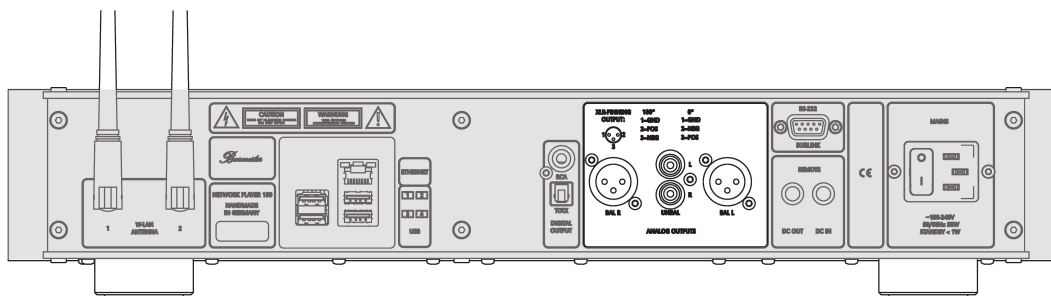


The Network Player features balanced XLR terminals as well as unbalanced RCA connectors for an analog connection to a power amplifier. We recommend a balanced connection for superior sound.

✓ Make sure all components to be connected are switched off.

1. Connect Network Player and power amplifier as desired.

Connecting a network cable

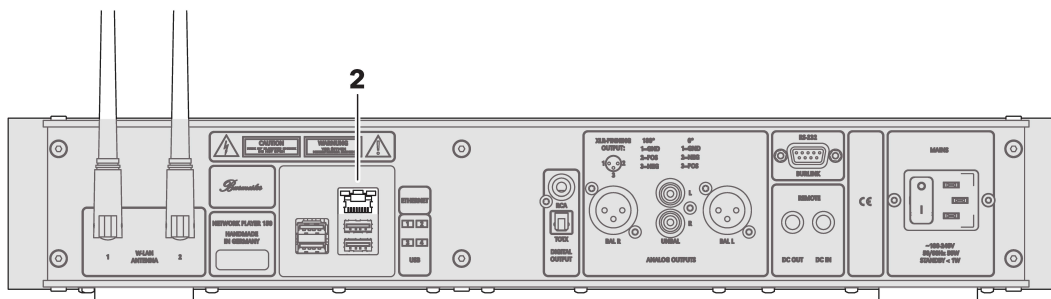


The Network Player may be connected to your home network using the Ethernet terminal (2) and a network cable.

Caution:

Please read the User Guide on how to use the Network Player in a network before plugging in the network cable.


Connecting the power cord

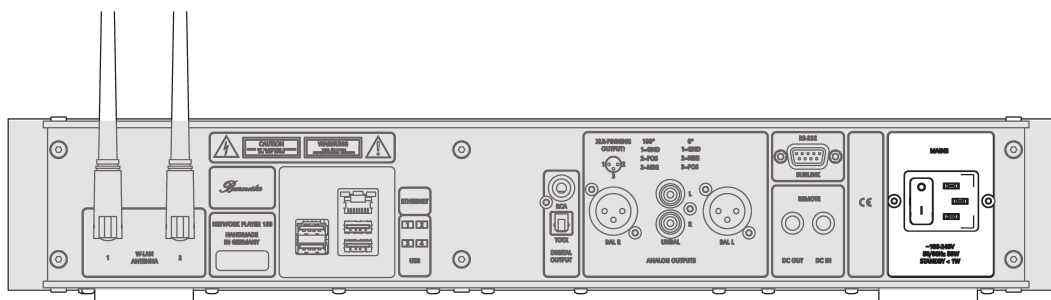

✓ Make sure the MAINS switch is set to OFF.

1. Connect the supplied power cord to the MAINS terminal and plug it into the AC outlet.
2. Switch the **MAINS** switch to **ON**.

CONTROL ELEMENTS AND DISPLAYS

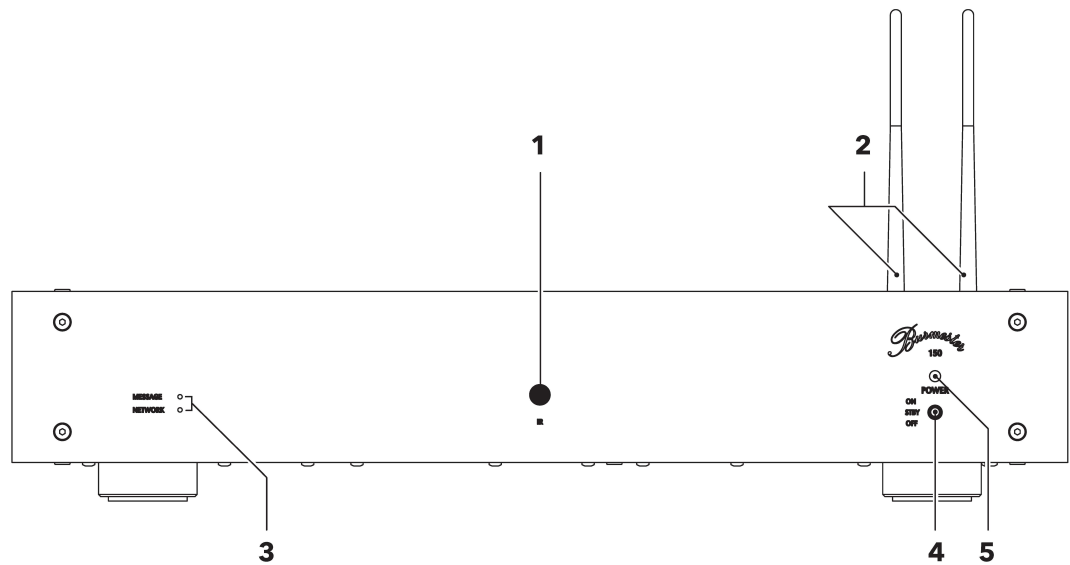

1 Infrared receiver

The IR receiver receives commands from the remote control. It must not be covered up by objects.

2 Wi-Fi antennas

3 LED display

- MESSAGE: A message has been received. Messages may be retrieved via the Web interface or using an iPad®.
- NETWORK: A network connection has been established.

4 ON/OFF switch (POWER)


- OFF: The Player is switched off. Turning it on using the remote control is not possible. The LED is dark.
- STBY: The Player is in standby mode and can be switched on by remote control. The LED is lit orange.
- ON: Briefly pushing the switch on the front panel upward turns the Network Player on. The switch returns to center position. The LED is lit red. Pushing the switch up again returns the player to standby mode.

5 LED (operation/standby)

- LED is lit orange: The device is in standby mode.
- LED is lit red: The device is turned on.

HOW TO SWITCH THE PLAYER ON?

- ✓ The **MAINS** switch on the rear panel is set to I (On).
- 1. Move the **POWER** switch on the front panel to the center position.
 - ✦ After a delay of up to 3 seconds the LED lights up orange and the Player is in standby mode.
- 2. Toggle the **POWER** switch briefly upward or press the **POWER** button on the remote control.
 - ✦ The LED lights up red and the system initializes. This process may take a little time.
 - ✦ After the start-up has been completed the LED above the **POWER** switch will light up red. The LEDs on the left of the front panel show the current operating status.

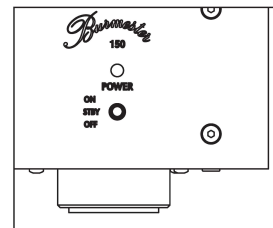

Note: The start-up process may take up to 2 minutes.

Switching the Player into standby mode:

- ▶ Briefly toggle the **POWER** switch on the front panel upward or press the **POWER** button on the remote control.
 - ✦ After the shutdown is complete the Player switches to standby mode.

Note: The shutdown process may take up to 1 minute.

Switching the Player completely off:

- ▶ Move the **POWER** switch on the front panel down into **OFF** position.
 - ✦ After the system shutdown the Player switches off. It can no longer be switched on with the remote control.

HOW TO CONNECT THE NETWORK PLAYER TO A NETWORK?

Connecting the Network Player with a network is the pre-requisite for Internet access as well as for networking with other devices. The connection to the Internet also enables additional function:


- Choose between a multitude Internet radio stations.
- Stream musical content from providers such as TIDAL.
- Receive messages, for example for a software update.
- Performing a software update via the Internet.

Detailed information on how to perform these functions can be found in the separate manuals „User Guide for Operation via the iPad® App“ and „User Guide for Operation via a Web browser“.

There are two ways to connect the Network Player to a network:

- Using an Ethernet cable
- Using a Wi-Fi connection

Establishing a network connection with an Ethernet cable

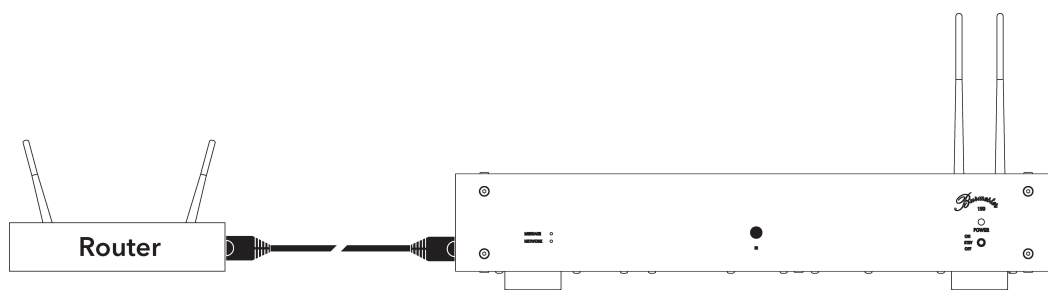


- Connect the Network Player to your router with an Ethernet cable.
 - ↳ In most cases, when using DHCP, an IP address is assigned to the Network Player automatically.

Note:

If you have problems with establishing a network connection you can also contact your Burmester dealer who would be glad to assist you with the installation.

Establishing a network connection using Wi-Fi

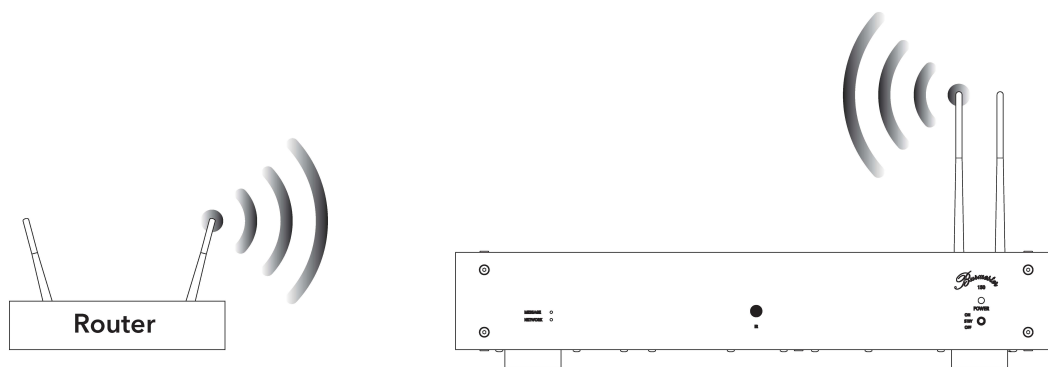


1. Press the **OSD** key on the remote control and then the buttons **7 - 8 - 9**.
 - ↳ The LEDs on the left side of the front panel light up orange.
2. Press number button **2** and then the **OK** key.
 - ↳ The network scan commences and the LEDs are blinking red.
 - ↳ After finishing the network scan the LEDs blink alternately green and orange.
3. Connect your computer via Wi-Fi with your Network Player (see "*Establishing a Wi-Fi connection between Network Player and Tablet/PC/Mac*" on page 13 or "*Establishing a Wi-Fi connection between Network Player and Tablet/PC/Mac*" on page 13).
4. Open a Web browser on your computer and type the IP address of the Network Player (**192.168.111.1**) or **http://networkplayer150.local** into the search box.
 - ↳ The browser displays a list of all available Wi-Fi networks.
5. Click on the name of the desired Wi-Fi network.
6. Encoded networks will display a lock symbol. Type in the password of your Wi-Fi router and hit **accept**.
 - ↳ Initially, the network LED will light orange. It will change to green when the Network Player is connected to the Internet.

- Note:** If you are using an iPad® you can also open the App **BurmesterMC** after connecting iPad® and Network Player. Select **Configure**, the browser starts automatically and the list of available Wi-Fi networks appears.
- Note:** in case of a hidden Wi-Fi network select **Not in List** (hidden ssid) and type in the Name of the Wi-Fi network in the **SSID** box. After that enter the Wi-Fi password of your router and click **accept**.
- Note:** If a wrong password has been entered the Player will not connect and the network LED lights up red (after no more than one and a half minutes). Return to step 1 of the process to establish a Wi-Fi connection.
- Note:** When the Network Player has been connected to a Wi-Fi network it is no longer possible to establish a direct Wi-Fi connection between computer (iPad®, Tablet, PC, Mac) and the Network Player. In that case the Wi-Fi connection needs a router.
- When the Network Player is connected to a Wi-Fi network all network settings will be saved.


HOW TO CONNECT COMPUTER AND NETWORK PLAYER?

The following charts clarify the different types of connection and the available control software.

Connections using a network connection via Ethernet cable

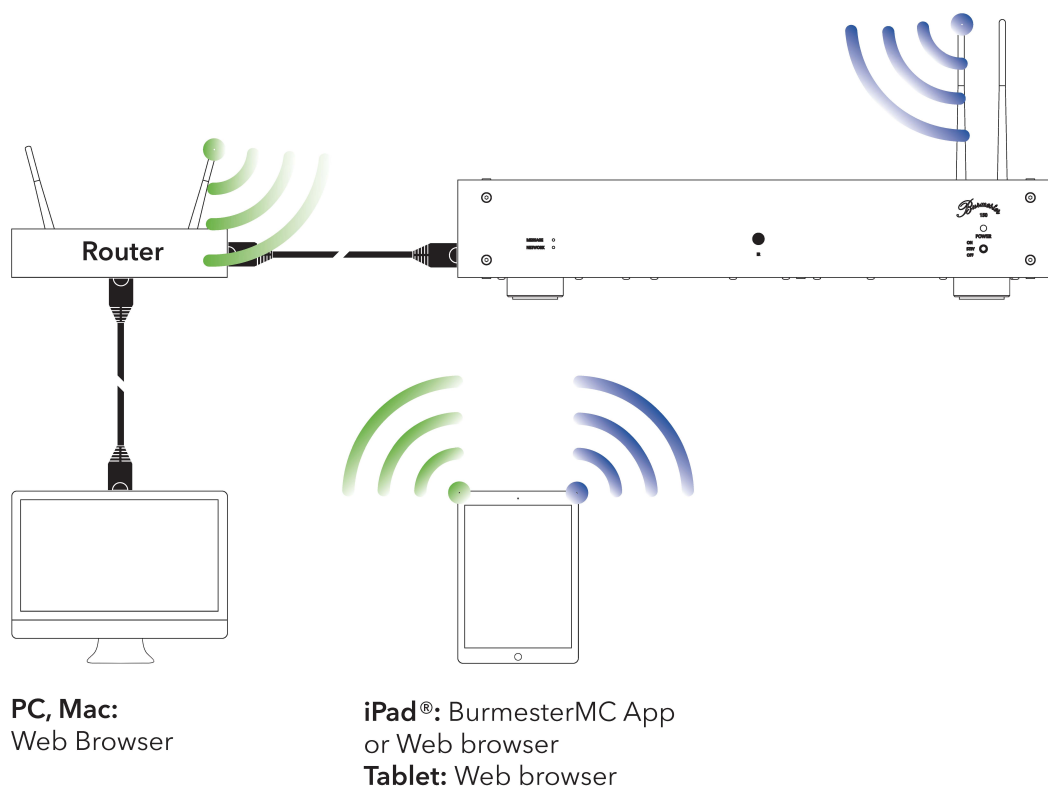

Connections using a Wi-Fi network connection

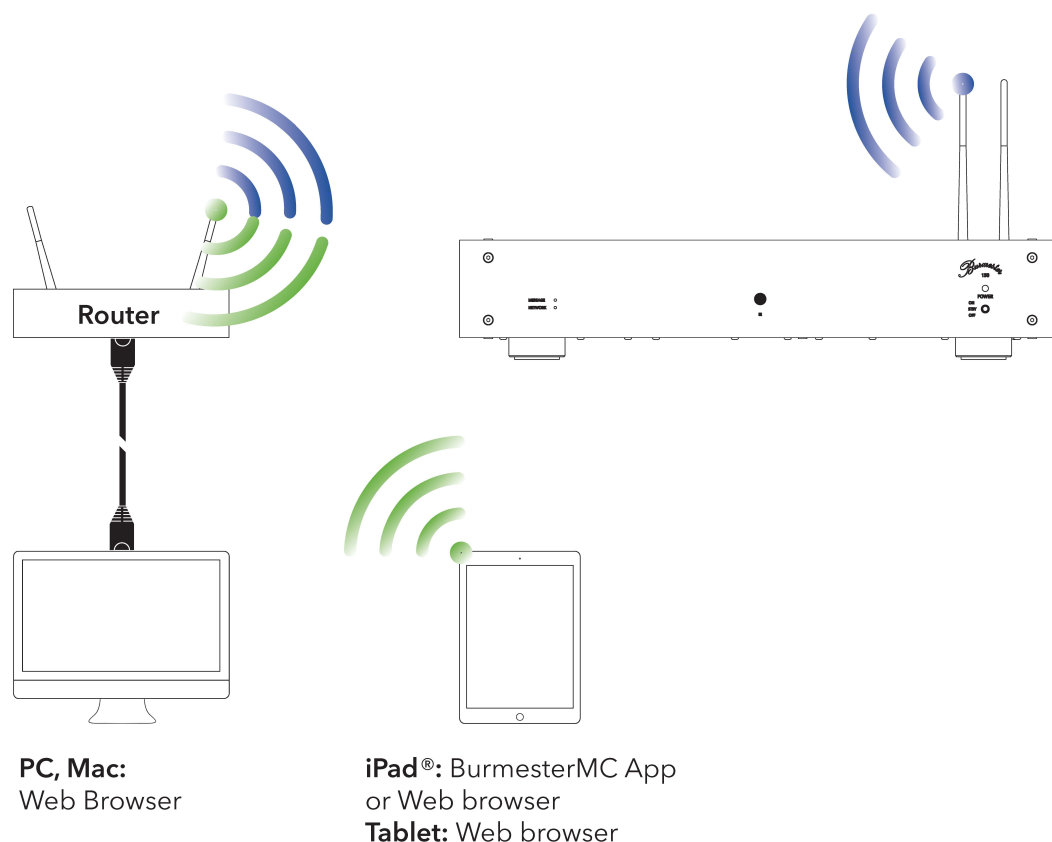

Establishing a LAN connection between Router and computer

- Use an Ethernet cable to connect your computer to your router.

Establishing a Wi-Fi connection between Network Player and Tablet/PC/Mac

The procedure when using a different computer depends on the installed operating system. Assistance may be obtained using the Help function of the operating system.

- In case of a direct Wi-Fi connection with the Network Player use the following specifications:
 - Name of the network (SSID): **Networkplayer150**
 - Password: **Burmester150**
- In case of a Wi-Fi connection via a router use the following specifications:
 - Name of the network (SSID): **Name of the router**
 - Password: **Wi-Fi password of the router**

HOW TO PLAY CONTENT FROM THE NETWORK?

To use the Network Player to stream music for example in a multiroom-application needs an active UPnP/DLNA server or a Musiccenter in the network.

Select the desired audio source via the iPad® App in the menu **Devices > Inputs** or via the Web browser's pop-up menu. Detailed information can be found in the separate manuals „User Guide for Operation via the iPad® App“ and "User Guide for Operation via a Web browser".

Note:

To facilitate seamless communication of network devices regardless of make the Network Player has been certified for the UPnP and DLNA standards. Trouble-free operation can thus only be guaranteed with devices that incorporate one of these standards.







The user interface and therefore the presentation of the available music depends on whether a Burmester Musiccenter or a server of a different make has been selected as source. Please find more information in the separate Manuals "User Guide for Operation via the iPad® App" and "User Guide for Operation via a Web browser".

HOW TO PLAY CONTENT FROM A USB STORAGE DEVICE?

To play music from a USB storage device it has to be saved there first. However, it does not matter how the content has been transferred (for example from a PC), how the tracks are organized (all in one folder or in various sub-folders) or in which compatible format they are available (i.e. MP3, AAC, FLAC).

Playing content from a USB storage device:

1. Connect the USB storage device with one of the USB slots on the rear panel of the Network Players.
 ↳ Playback will start automatically.
2. Use the appropriate keys on the remote control to control playback.

Remote control	Function
	Starts or pauses playback at the current position.
	Stops playback.
	Playback skips to the next track.
	Skips to the beginning of the current track when pressed during playback. Skips to the previous track when pressed again.
	Jump back 10 seconds during playback.
	Jump forward 10 seconds during playback.

HOW TO PLAY CONTENT FROM THE INTERNET?

To play content from the Net the Network Player needs access to the Internet. You can select radio station or music streaming services using the iPad® or your Web browser.

Note: Detailed information can be found in the separate Manuals "*User guide for operation via the iPad® App*" and "*User guide for operation via a Web browser*".

Streaming music online using TIDAL

TIDAL is an online streaming service which offers high-resolution music. TIDAL's content can be selected using the iPad® or a Web browser.

- To connect your TIDAL user account with the Network Player type in your access data via the iPad® App under **Settings** > **Online Services** or via the Web browser under **System** > **Settings**.

Note: Detailed information on how to use TIDAL can be found in the attached user guide.

Note: Making use of services from outside suppliers such as Internet radio or music streaming services with the Network Player 150 may be subject to separate conditions of use as well as to technical capabilities of the user or the outside supplier (Internet availability; availability of services) that are outside the control of Burmester Home Audio GmbH

TECHNICAL SPECIFICATIONS

Input/Output Connectors

Analog outputs	1 x Stereo XLR, 1 x Stereo RCA
Digital outputs	1 x coaxial, 1 x optical (TOSLINK)
Remote control BURLINK	1 x RS-232
Remote control REMOTE	2 x Hollow plug 5,5/2,5 mm (DC OUT, DC IN)
Ethernet	1 x RJ-45
USB	4 x USB 2.0, Typ A
Power supply	IEC socket C14 after IEC 60320-1, with mains switch
Wi-Fi antennas	2 x coax screw connectors

General Specifications

Dimensions (W x H x D)	482 mm x 95 mm x 345 mm (19" x 3.75" x 13.5") The space needed for plugs is not included in the dimensions.
Weight	app. 8kg (18 lbs)
Voltage	100 V – 240 V, 50 Hz/60 Hz
Fuses	F1: T 1 A E, F2: T 1.25A E
Power consumption	ON: max. 40 W STBY: <1 W OFF: <1 W

Burmester Home Audio GmbH
Wilhelm-Kabus Straße 47 · 10829 Berlin, Germany
www.burmester.de

Version 1.1 / 1802